



- Notes on installation:**
1. Boxed views are intended to show typical installation of Multiphase Submetering System with CT-coil set. The Multiphase Smart Meter Module reports CT-coil data to the Hub and receives power via network cable.
 2. Submeter Hub is web enabled (DHCP or Static), and reports
 2. Split core CT-coils are installed with arrow on plastic housing pointing towards load. Use web interface to select appropriate current level for installed CT coils.
 4. The Multiphase Smart Meter Module is an open type construction and approved for installation inside an electrical cabinet ⁽¹⁾.
- (1) Not UL approved for installation at service entrance or in manufactured distribution panel unless specified as an approved accessory.

<h2>Multipoint Submetering System</h2>	
	<p>770-00013_1014429 Rev A0, April 21 2017</p>